



Set Up Guide

Single Pneumatic Heat press

Congratulations on your new purchase. This guide will help you through setting up your Single Pneumatic Heat Press.

1

Getting Started

- We recommend having the following tools available to make your set up as smooth as possible:
 - An adjustable spanner
 - A level
 - A sturdy and stable surface to place and operate the heatpress from
 - A second person to assist with heavy lifting

2

Setting Up Your Space

- Make sure that the space you are going to set your single pneumatic heat press in is clear, level and capable of supporting the heat press.

3


Levelling

- With another person, place the heatpress onto your workspace.
- Check that the heatpress is level, this is important otherwise the press can swing away on its own if it is not level.
- To make adjustments to the machines level, screw/unscrew the feet on the bottom of the heat press as necessary.



6 Attaching Air Hose

- At the back of the heat press you will find the inlet for the air hose to your compressor.
- 1) Undo the threaded nut from the air valve and slide onto the hose (if the air hose has a connector cut off the end that is not needed then slide on the connector as shown).
- 2) Push the air line hose onto the airline intake valve.

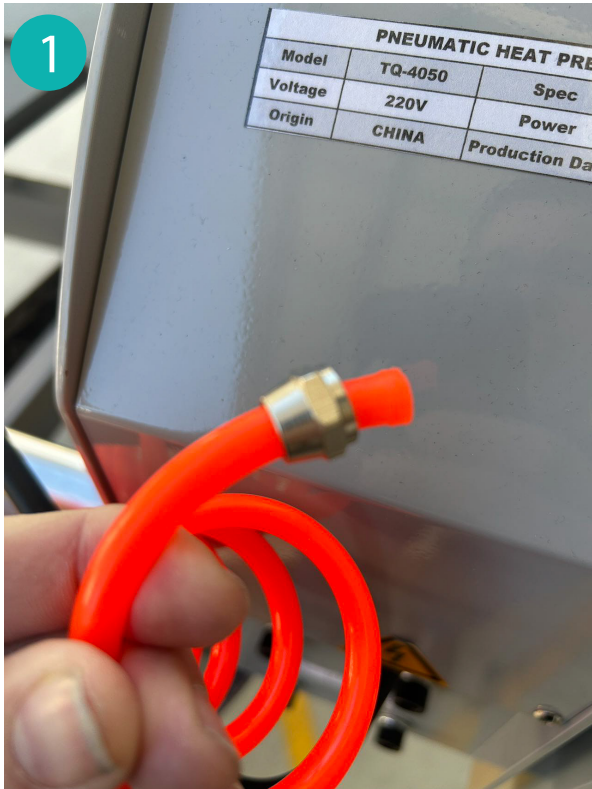

- 3) Attach threaded screw and tighten with a spanner

